

# Fiber Coupled Laser Multimode High Power



450nm, up to 200W, 200µm 0.22NA Fiber

DATASHEET

[Return to the Webpage](#)



## Features

- 450nm Center Wavelength
- 200W High output power
- 200µm 0.22NA Fiber
- RoHS Compliance

## Applications

- OCT
- Medical care
- Printing
- Material processing
- Pump source

The FCMH series diode lasers deliver up to 500 W of power through a 200 µm fiber. They provide high brightness and simplified thermal management by distributing the diodes (heat sources), allowing for a water-cooled architecture with reliable, predictable performance. A turn-key benchtop unit is available, integrating the power supply, water cooling, power control, and safety shut-off features.

## Specifications

| Parameter                                | Min | Typical  | Max | Unit   |
|--|-----|----------|-----|--------|
| Center Wavelength $\lambda$              | 440 | 450      | 460 | nm     |
| Output Power                             |     | 200      |     | W      |
| Spectral Width FWHM                      |     | 6        |     | nm     |
| Operating Current Iop                    |     | 2.5      |     | A      |
| Threshold Current Lth                    |     | 0.3      |     | A      |
| Operating Voltage Vop                    |     | 50       |     | V      |
| Thermistor (K $\Omega$ )/ $\beta$ (25°C) | 7   | 10       | 13  | %/3477 |
| Fiber Bend Radius                        |     | 90       |     | mm     |
| Fiber Core Diameter                      |     | 200      |     | µm     |
| Fiber Numerical Aperture                 |     | 0.22     |     | NA     |
| Fiber Connector                          |     | Bare end |     |        |
| Fiber Length                             |     | 1        |     | m      |
| Operating Temperature                    | 15  |          | 35  | °C     |
| Storage Temperature                      | -20 |          | 70  | °C     |
| Wavelength Temperature Coefficient       |     | 0.3      |     | nm/°C  |

**Note:** The specifications provided are for general applications with a cost-effective approach. If you need to narrow or expand the tolerance, coverage, limit, or qualifications, please [click this link](#):  
\*The contact resistance between the diode and the heat sink is less than 1cm<sup>2</sup> K/W.



**Warning:** The device can be damaged by a spike in applying voltage. Do not touch by hand or use a regular power supply. The device mounted on PCB is a cost-effective OEM module for professional system integration only, not intended for laboratory use, which be a protected turn-key boxed package. Information is believed to be accurate and is subject to change without notice. Some specific combinations of options may not be available. The user assumes all risks and liability in connection with the use of a product or its application.

Rev 10/18/24


# Fiber Coupled Laser Multimode High Power



450nm, up to 200W, 200µm 0.22NA Fiber

## DATASHEET

### Mechanical Dimensions (mm) 200W

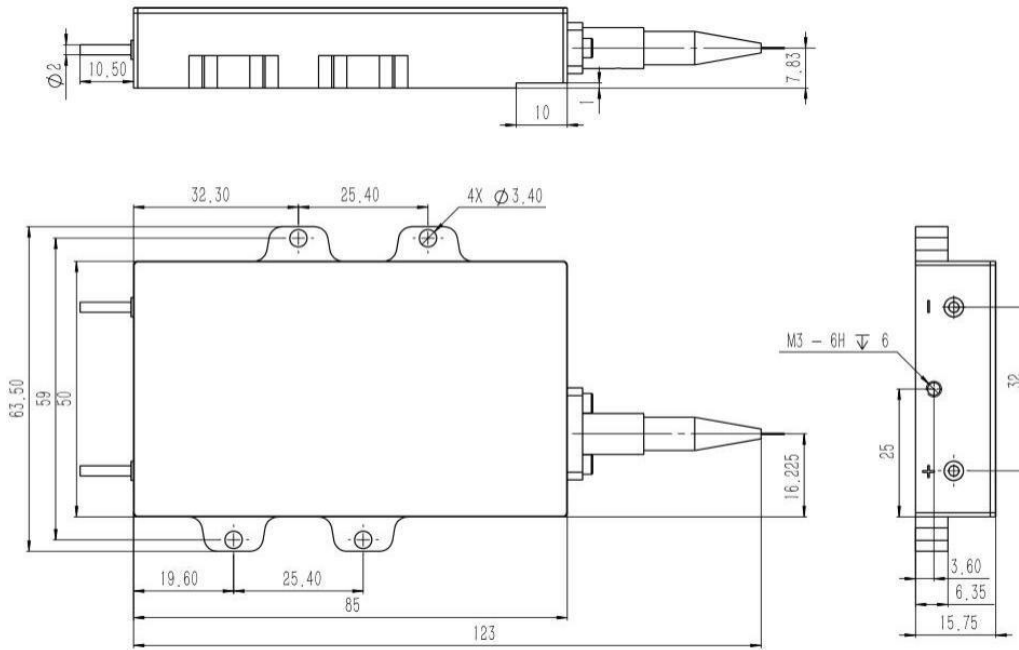

\*Product dimensions may change without notice. This is sometimes required for non-standard specifications.

### Ordering Information

| Prefix | Wavelength  | Output Power   | Package | Fiber Type   | Fiber Buffer                                | Fiber Length                   | Connector          |
|--------|-------------|--|---------|--|---|--------------------------------|--------------------|
| FCMH-  | 450nm = 450 | 3W = 03<br>10W = 01<br>50W = 05<br>100W = 10<br>200W = 20<br>250W = 25<br>300W = 30<br>320W = 32<br>340W = 34<br>900W = 90 | A = A   | 200 µm = 2<br>105 µm = 5<br>400 µm = 4<br>135 µm = 1 | 0.9mm Tube = 1<br>3mm Tube = 3<br>Armor = A | 0.5m = 1<br>1m = 2<br>1.5m = 3 | Non = 1<br>SMA = 2 |

# Fiber Coupled Laser Multimode High Power



450nm, up to 200W, 200µm 0.22NA Fiber

## DATASHEET

### Benchtop Turnkey Unit



The HPML series High Power Fiber Coupled Laser Source is a turn-key unit, featuring ease of use and low cost with a manual or USB/GUI control. These all-in-one benchtop lasers integrate a laser, output tap monitor, controller, and heat dissipator, providing a convenient and reliable high-power laser source. The control has three options: low-cost constant current mode, and feedback constant output mode (having an output monitor). The unit can generate pulse output via modulating the laser directly (power and duration are settable via USB interface). Moreover, we offer a red-laser integrated fiber output for visual aid as well as a collimator at the fiber end options. A safety interlock is provided at the back. For power below 50W, the unit is cooled with internal fans. For higher power water cooling is required. We further offer matching chiller.

For details please click: <https://agiltron.com/product/high-power-fiber-coupled-laser-source-multimode/>

### Ordering Information

| Prefix | Wavelength  | Power      | Feedback * | Red Laser ** | Cooling   | Modulation | Fiber Core  | Fiber Length | Connector   | Collimator *** |
|--------|-------------|------------|------------|--------------|-----------|------------|-------------|--------------|-------------|----------------|
| HPML-  | 980nm = 9   | 5W = AA5   | No = 1     | No = 1       | Fan = 1   | No = 1     | 135µm = 1   | 0.25m = 1    | No = 1      | No = 1         |
|        | 880nm = 8   | 8W = AA8   | Yes = 2    | Yes = 2      | Water = 2 | Yes = 2    | 200µm = 2   | 0.5m = 2     | SMA = 2     | Yes = 2        |
|        | 808nm = 7   | 10W = A10  |            |              |           |            | 105µm = 5   | 1m = 3       | Special = 0 |                |
|        | 650nm = 6   | 22W = A12  |            |              |           |            | 400µm = 4   | 1.5m = 4     |             |                |
|        | 532nm = 5   | ...        |            |              |           |            | Special = 0 | 2m = 5       |             |                |
|        | 455nm = 4   | 100W = 100 |            |              |           |            |             | Special = 0  |             |                |
|        | 355nm = 3   | ...        |            |              |           |            |             |              |             |                |
|        | 967nm = B   | 200W = 200 |            |              |           |            |             |              |             |                |
|        | 915nm = A   | 280W = 280 |            |              |           |            |             |              |             |                |
|        | Special = 0 | 500W = 500 |            |              |           |            |             |              |             |                |

\* Feedback control automatically maintains a constant laser power \$2350

\*\* This option provided visual of the laser spot. \$980

\*\*\* Collimator selections go to <https://agiltron.com/product/high-power-fiber-optic-collimator/>

# Fiber Coupled Laser Multimode High Power



450nm, up to 200W, 200µm 0.22NA Fiber

## DATASHEET

### Laser Safety

- **Laser Safety:** Avoid direct exposure to the fiber output or the collimated beam along its optical axis while the device is in operation. Always wear proper laser safety eyewear.
- **Maximum Ratings:** Absolute maximum ratings should only be applied to the device for short periods. Extended exposure or operation beyond these ratings may result in damage or reduced reliability. Ensure power supplies are configured so that the maximum peak optical power is not exceeded.
- **Thermal Management:** A proper heatsink must be used with the device to ensure sufficient heat dissipation. Thermal conductance to the heatsink must be maintained for reliable operation.
- **Operating Conditions:** The device is an open-heatsink diode laser, suitable for operation in a cleanroom atmosphere or dust-protected housing. Ensure controlled operating temperature and humidity to avoid condensation on laser facets. Contamination or contact with the laser facets must be avoided.
- **ESD Protection:** Electrostatic discharge (ESD) is a leading cause of product failure. Use wrist straps, grounded work surfaces, and strict antistatic measures when handling the device.
- **Regulatory Compliance:** This product complies with Title 21 of the Code of Federal Regulations (CFR) and is classified as an FDA/CDRH Class 1M laser product under accession number 0220191. It has been tested according to IEC 60825-1:2007 / EN 60825-1:2007 standards. For Class 1M lasers, viewing the laser output with certain optical instruments (such as eye loupes, magnifiers, or microscopes) within 100 mm may pose an eye hazard. Similarly, viewing collimated beams with instruments designed for distance (e.g., telescopes or binoculars) may also pose an eye hazard.



### Electrostatic Sensitivity



- Never touch laser diode and the module using hands
- Always use protections when handle a laser diode
- Recommend mounting the laser diode using an ionic gun and ESD finger cots



\*Product dimensions may change without notice. This is sometimes required for non-standard specifications.