100kHz Driver for NanoSpeed™ Variable Optic Attenuator



(patents pending)





Return to the Webpage 🕥



Features

- Fast response
- High repetition rate
- Push-Pull output design
- Low quiescent power consumption

Applications

- NS-VOA
- Optical Modulator

Rov 11/20/24

Variable beam splitter

This NS series of fast-speed driver is designed to control NS series of solid state variable optic attenuators (VOA). The push-pull output design is especially suitable for driving capacitive VOA loads, assuring the fast response time both on rising and falling of attenuation. The driver can be operated by 0-5V signal to control the attenuation of VOA.

The standard driver controls one individual VOA. Drivers controlling multiple VOAs are also available, please call Sales at (781) 935-1200 for more information.

Specifications

Parameter	Min	Typical	Max	Unit
Response time (Rise) (Sr) ^[1]	250		850	ns
Response time (Fall) (Sf) ^[2]	250		850	ns
Repetition Rate	DC		100	kHz
Control signal for attenuation	0		5[3]	v
Power Consumption [4]			8	W
Power Supply	12		24	V
Operating Temperature	-5		70	°C
Storage Temperature	-40		80	°C
Electrical Connector		SMA		MHz

Notes:

[1]: Response time (Rise): Begin of electronic signal to the completion of optic intensity change.

[2]: Response time (Fall): Begin of electronic signal to the completion of optic intensity change.

- [3]: For full attenuation in VOA
- [4]: Dependent on repetition frequency. Measured for the attenuation > 20dB at 100 kHz.

Warning: The device mounted on the PCB is an OEM module designed for system integration only, not for general uses. Do not touch the PCB by hand. The electrical static can kill the chips even without a power plug-in, and unpleasant electrical shock may also be felt. For laboratory use, please buy a protected Turnkey system.

Legal notices: All product information is believed to be accurate and is subject to change without notice. Information contained herein shall legally bind Agiltron only if it is specifically incorporated into the terms and conditions of a sales agreement. Some specific combinations of options may not be available. The user assumes all risks and liability whatsoever in connection with the use of a product or its application.

Nev 11/30/24		
© Photonwares Corporation	P +1 781-935-1200 E sales@photonwares.com	www.agiltron.com

Information contained herein is deemed to be reliable and accurate as of the issue date. Photonwares reserves the right to change the design or specifications at any time without notice. Agiltron is a registered trademark of Photonwares Corporation in the U.S. and other countries.


100kHz Driver for NanoSpeed™ Variable Optic Attenuator



(Preliminary) (patents pending)


DATASHEET

Mechanical Dimensions (mm)

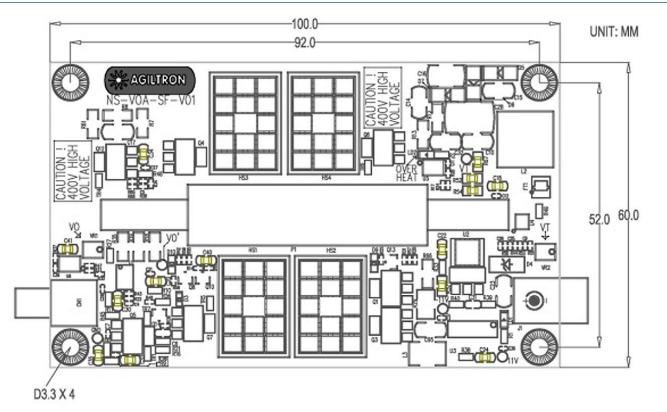

*Product dimensions may change without notice. This is sometimes required for non-standard specifications.

Response Time

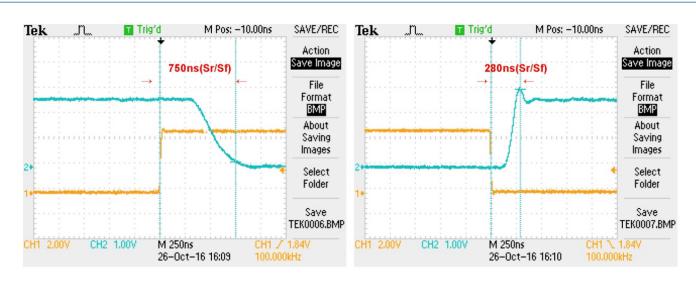

© Photonwares Corporation

+1 781-935-1200

www.agiltron.com

Information contained herein is deemed to be reliable and accurate as of the issue date. Photonwares reserves the right to change the design or specifications at any time without notice. Agiltron is a registered trademark of Photonwares Corporation in the U.S. and other countries.

E sales@photonwares.com

100kHz Driver for NanoSpeed[™] Variable Optic Attenuator




(Preliminary)

(patents pending)

DATASHEET

Power Consumption

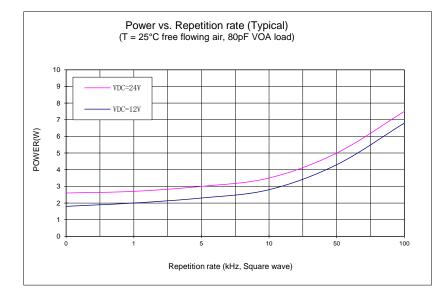

Ordering Information

	11		2		1		
Prefix	Туре	Repetition		Size		# of VOA	Connector
NVDR-		DC-100kHz = 2 Special = 0		3.9"x2.4"x0.6" = 2 Special = 0		Single VOA = 11 Special = 00	SMA = 2 Special = 0

Fiber Core Alignment

Note that the minimum attenuation for these devices depends on excellent core-to-core alignment when the connectors are mated. This is crucial for shorter wavelengths with smaller fiber core diameters that can increase the loss of many decibels above the specification if they are not perfectly aligned. Different vendors' connectors may not mate well with each other, especially for angled APC.

Fiber Cleanliness

Fibers with smaller core diameters (<5 µm) must be kept extremely clean, contamination at fiber-fiber interfaces, combined with the high optical power density, can lead to significant optical damage. This type of damage usually requires re-polishing or replacement of the connector.

Maximum Optical Input Power

Due to their small fiber core diameters for short wavelength and high photon energies, the damage thresholds for device is substantially reduced than the common 1550nm fiber. To avoid damage to the exposed fiber end faces and internal components, the optical input power should never exceed 20 mW for wavelengths shorter 650nm. We produce a special version to increase the how handling by expanding the core side at the fiber ends.

P +1 781-935-1200

E sales@photonwares.com

www.agiltron.com

100kHz Driver for NanoSpeed[™] Variable Optic Attenuator



(Preliminary)

(patents pending)


DATASHEET

DC Power Connection


Variation 1

P/N: SC1313-ND


Power Barrel Connector Jack 2.00mm ID (0.079"), 5.50mm OD (0.217") Through Hole, Right Angle

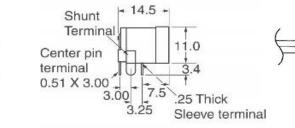

12V Wall Plug DC Power Supply Interface



Variation 2

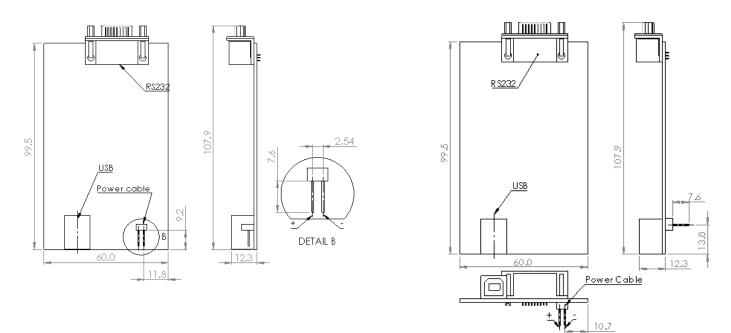

Note: The DC Power Barrel Jack Connector can be replaced with a two-pin connector, available in two configurations: one with pins facing downward for direct PCB mounting and another for connection with a standard cable connector. This flexibility allows for integration into various system designs.

*Product dimensions may change without notice. This is sometimes required for non-standard specifications.

© Photonwares Corporation

E sales@photonwares.com

www.agiltron.com

Information contained herein is deemed to be reliable and accurate as of the issue date. Photonwares reserves the right to change the design or specifications at any time without notice. Agiltron is a registered trademark of Photonwares Corporation in the U.S. and other countries.

100kHz Driver for NanoSpeed[™] Variable Optic Attenuator



(Preliminary) (patents pending)

DATASHEET

Typical Operation Instructions

- 1. Connect a control signal to the SMA connector on the PCB.
- 2. Attach the accompanied power supply (typically a wall-pluggable unit).
- 3. The device should then function properly.

Note: Do not alter device factory settings.

E sales@photonwares.com